

027R9526

Installation

027R9526

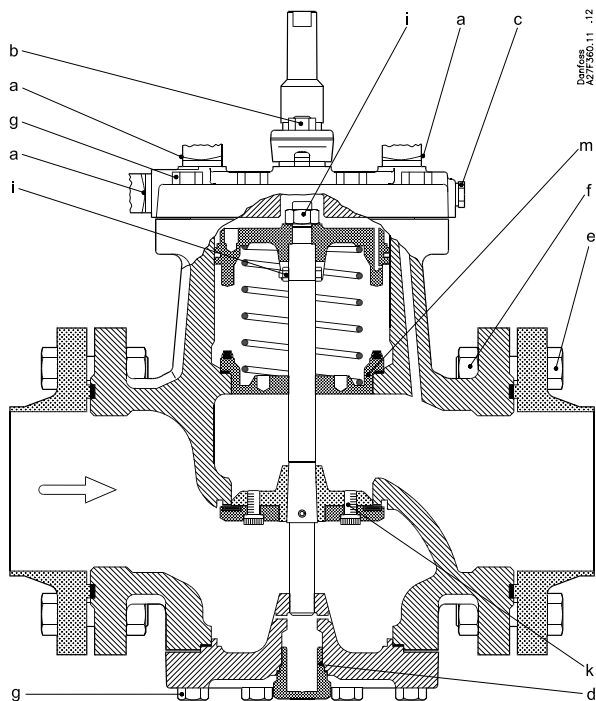


Fig. 1

Pos. item	Torque		
	Nm	kpm	lbf-ft
	10	1	7.4
Tightening Torque in Nm			
	80	100	125
a	50		
b	65		
c	25		
d	140		
e	80	80	125
f	105	135	200
g	75	80	125
i	9		
k	25	40	60
l	45	60	90
m	150	220	310

Table 1

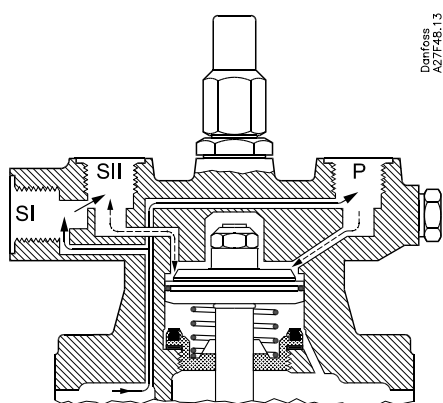


Fig. 2

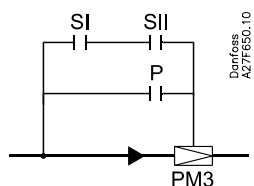


Fig. 3



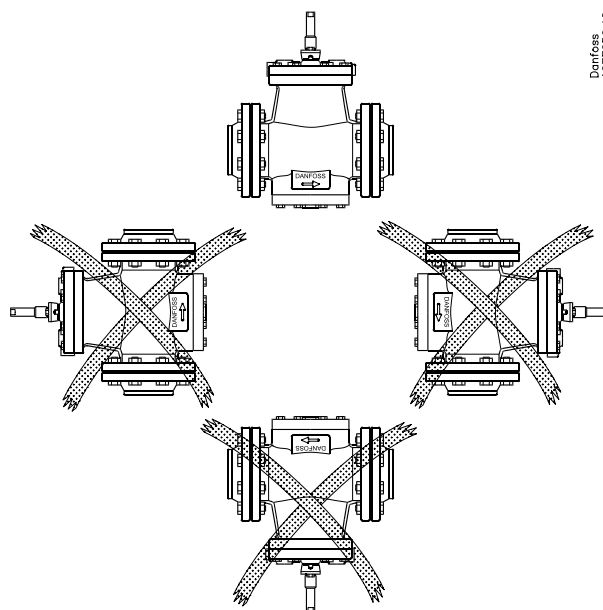



Fig. 4

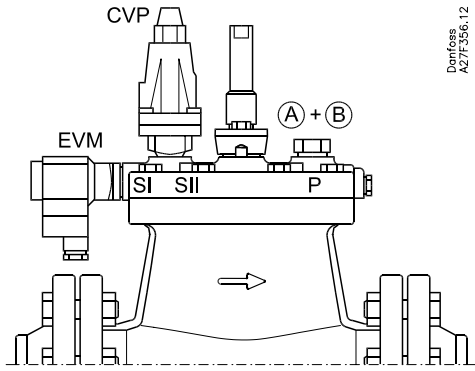

Danfoss
A27F356.12

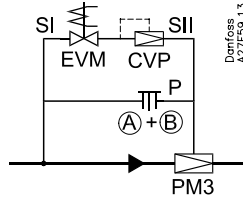


Danfoss
A27F59.13

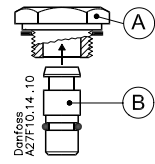


Danfoss
A27F10.14.10


Fig. 5

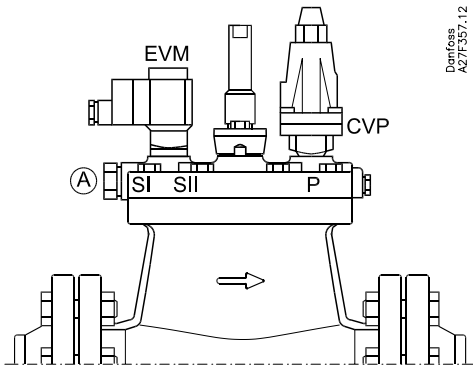

Danfoss
A27F357.12

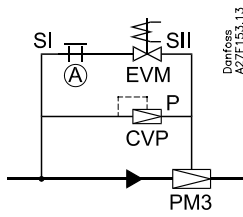


Danfoss
A27F153.13

 


Danfoss
A27F09.15

Fig. 6

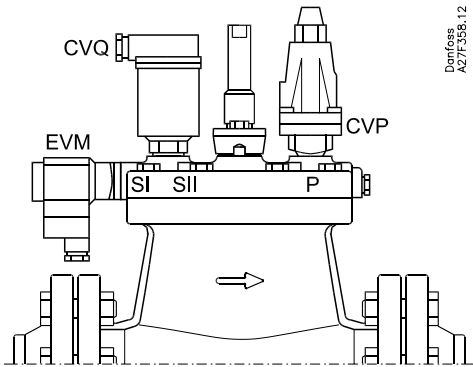


Danfoss
A27F358.12

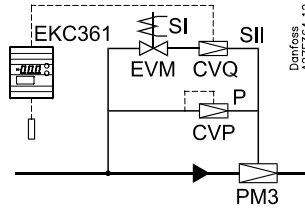


Danfoss
A27F364.12

Fig. 7

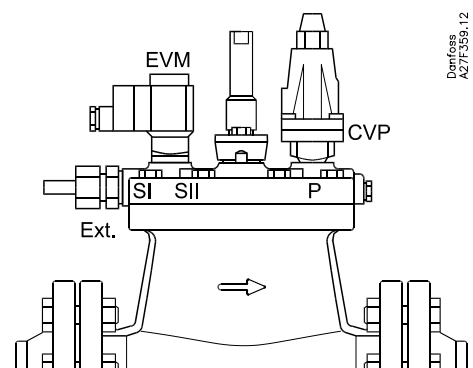

Danfoss
A27F359.12

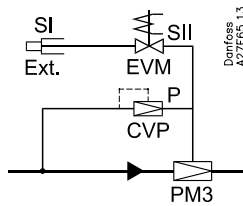

Danfoss
A27F65.13

Fig. 8

Installation

Refrigerants

Applicable to all common non-flammable refrigerants, including R717 and non-corrosive gases/liquids dependent on sealing material compatibility. Flammable hydrocarbons are not recommended. The valve is only recommended for use in closed circuits. For further information please contact Danfoss.

Temperature range

PM: -60/+120°C (-76/+248°F)

Pressure range

PM: The valves are designed for a max. working pressure of 28 bar g (406 psi g).

Technical data

The PM 3 can be used in suction, liquid, hot-gas and liquid/vapour lines. The PM 3 regulates the flow of the medium by modulation or on/off function, depending on the control impulse from the screwed-on pilot valves. The PM 3 has three connections for pilot valves: two in series, marked "S I" and "S II", and one in parallel with these two, marked "P", see figs. 2 and 3.

Schematic examples of pilot valves connected to the PM can be seen in figures 5, 6, 7, and 8.

If only two pilot valves are necessary for the function required, the third pilot connection must be sealed with a blanking plug (see fig. 5). A blanking plug is supplied with the valve.

Regulating range

Dependent on pilot valves.

Opening differential pressure (Δp)

The PM main valve requires a minimum opening differential pressure of 0.07 bar (1 psi) to begin to open and 0.2 bar (2.8 psi) to be completely open.

Note: The valve opens when differential pressure against the direction of flow occurs.

Installation

Flange set for the PM is delivered separately. The valve must be installed with the arrow in the direction of the flow and the top cover upwards (fig. 4). The top cover can be rotated $4 \times 90^\circ$ in relation to the valve body.

The valve is fitted with a spindle for manual opening.

If an external pilot valve is used, the pilot line must be connected to the upper side of the main line so that any dirt and oil from the plant will not find its way into the pilot line.

If the PM 3 is to be used as a solenoid valve in a liquid line, external control pressure cannot be recommended because it can cause liquid hammer.

The valve is designed to withstand a high internal pressure. However, the piping system should be designed to avoid liquid traps and reduce the risk of hydraulic pressure caused by thermal expansion. It must be ensured that the valve is protected from pressure transients like "liquid hammer" in the system.

Welding

If using welding flanges, only materials and welding methods, compatible with the flange material must be welded to the flanges. The flanges should be cleaned internally to remove welding debris on completion of welding and before the valve is inserted.

The valve housing and flanges must be free from stresses (external loads) after installation.

PM valves must not be mounted in systems where the outlet side of the valve is open to atmosphere. The outlet side of the valve must always be connected to the system or properly capped off, for example with a welded-on end plate.

Colours and identification

The PM valves are Zinc-Chromated in the factory. If further corrosion protection is required, the valves can be painted. Precise identification of the valve is made via the ID plate on the top cover. The external surface of the valve housing must be prevented against corrosion with a suitable protective coating after installation and assembly.

Protection of the ID plate when repainting the valve is recommended.

Maintenance

Service

The PM valves are easy to dismantle and most of its parts are replaceable. When the bottom cover is removed, the strainer can be taken out for cleaning.

Do not open the valve while the valve is still under pressure.

- Check that the gasket has not been damaged. Ideally, the gasket should be replaced.
- Check that the spindle is free of scratches and impact marks.
- If the teflon ring has been damaged, the parts must be replaced.

Assembly

Remove any dirt from the body before the valve is assembled. Check that all channels in the valve are not blocked with particles or similar.

Tightening*Tightening torques*

See fig. 1 and table 1.

Use only original Danfoss parts, including packing glands, O-rings and gaskets for replacement. Materials of new parts are certified for the relevant refrigerant.

In cases of doubt, please contact Danfoss. Danfoss accepts no responsibility for errors and omissions. Danfoss Industrial Refrigeration reserves the right to make changes to products and specifications without prior notice.

