



Fig. 1, SVA-HS 50-200

	Size 50 (2 in.)	Size 65 (2½ in.)	Size 80 (3 in.)	Size 100 (4 in.)	Size 125 (5 in.)	Size 150 (6 in.)	Size 200 (8 in.)
<b>Description</b>	<b>Code no.</b>	<b>Code no.</b>	<b>Code no.</b>	<b>Code no.</b>	<b>Code no.</b>	<b>Code no.</b>	<b>Code no.</b>
<b>Spare part kit, cone</b>	<b>148B4112</b>	<b>148B4113</b>	<b>148B4114</b>	<b>148B4115</b>	<b>148B4116</b>	<b>148B4117</b>	<b>148B4118</b>
Pos. 5 Cone complete incl. steel balls and Allen screw 13 Gasket for housing / bonnet Allen key							
<b>Spare part kit, for bonnet and cap (dismounting set)</b>	<b>148B4121</b>	<b>148B4122</b>	<b>148B4123</b>	<b>148B4124</b>	<b>148B4125</b>	<b>148B4126</b>	<b>148B4127</b>
Pos. 13 Gasket for housing / bonnet 18 Gasket for cap 19 Back sealing (only for size 80 - 200)							
<b>Repair kit, complete set of gaskets</b>	<b>148B4130</b>	<b>148B4131</b>	<b>148B4132</b>	<b>148B4133</b>	<b>148B4134</b>	<b>148B4135</b>	<b>148B4136</b>
Pos. 5 Cone complete incl. steel balls and Allen screw 8 Packing gland incl. gaskets 13 Gasket for housing / bonnet 18 Gasket for cap 19 Back sealing (only for size 80 - 200) and Allen key							
<b>Handwheel incl. nut and washer</b>	<b>148B4064</b>	<b>148B4064</b>	<b>148B4065</b>	<b>148B4066</b>	<b>148B4067</b>	<b>148B4067</b>	<b>148B4068</b>
Pos. 14 Handwheel incl. nut and washer							
<b>Cap incl. gasket</b>	<b>148B4076</b>	<b>148B4076</b>	<b>148B4077</b>	<b>148B4077</b>	<b>148B4078</b>	<b>148B4078</b>	<b>148B4079</b>
Pos. 17 Cap incl. gasket							
Pos. 13 Gasket for housing / bonnet (10 pcs.)	<b>148B4155</b>	<b>148B4156</b>	<b>148B4157</b>	<b>148B4158</b>	<b>148B4159</b>	<b>148B4160</b>	<b>148B4161</b>